

photobook^{PRO}

User Manual



Ref. 060 677 289 A

Contents

Safety	5
1. Warnings	5
2. Electrical hazard	5
3. Moving the machine	5
4. Installation conditions	5
Using Photobook PRO	7
1. Position of the user.....	7
2. Using the Photobook PRO's control screen	7
3. Realizing a photo book.....	8
3.1 Realizing a photo book with cover.....	8
3.2 Realizing a photo book without cover.....	9
3.3 Aborting the realization	9
4. Selecting the paper type	10
5. Changing the user's language	11
7. Information about your machine.....	11
6. Cleaning the rollers	11
Supplying glue	13
1. Loading the glue roll.....	13
2. Path of the glue strip.....	15
3. Changing a finished glue roll.....	16
4. Changing the glue roll format	16
Appendix	19
Compliance with FCC standards part 15	19
1. FCC as applies to PhotoBook PRO machines	19
2. FCC norm as applies to the bar code reader	20

Safety

1. Warnings

1. Access areas for the user do not require tools to access them. Only maintenance technicians approved by the manufacturer are authorized to access areas requiring a tool.
2. Some parts can be heavy to handle like the glue magazine or the machine itself.
3. Since the machine is not watertight, do not spill liquid over it.

2. Electrical hazard



Important: *only maintenance technicians approved by the manufacturer are authorized to open and/or dismantle the machine.*

3. Moving the machine

The machine should not be moved when operating mode even switched on.

4. Installation conditions

The machine is intended for indoor use only.



Site requirements:

1. The machine should be installed near a main electrical outlet which should remain accessible after the installation so that the user can disconnect it. This main electrical outlet must be earth grounded to ensure proper operation and personal safety to conform with current standards. If the main electrical outlet

socket cannot be accessed, include an isolating switch, quickly and easily accessible, with (as the outlet) the following characteristics: 100-240 V AC, 50/60 Hz. Power consumption should be: 100-240 V 4-2 A.



Note: *the machine is disconnected from the power network by disconnecting the switch from the outlet.*

2. The machine should be placed on a dry, hard, stable and flat plane. Avoid excessively humid areas.
3. The ambient temperature in the premises should be between + 10° C et + 40° C. Do not put the machine in areas exposed to direct sunlight (in front of a window) or near heaters. Never place the machine near steam or oily vapours. The premises should be properly ventilated and the atmosphere cleaned with air filtration.
4. The machine should not hinder traffic routes or public exits. Avoid areas closed to stairs, escalators or lifts.

Using Photobook PRO

Photobook PRO allows to realize photo books, with or without cover, from photos arranged with the My Creativ' Album software.

To select the different options of Photobook PRO, use the screen and the selection keyboard on the side of the machine.

1. Position of the user

To use Photobook PRO, face the side of the machine where are located the screen and the selection keyboard. The back of the machine is then to your left and the front is to your right.

2. Using the Photobook PRO's control screen

Once you've started the machine (thanks to the switch located on the back of the machine), a welcome message automatically displays. Hit then any key to access the 'Product selection' option of the main menu.

Use the ↑ and ↓ keys to move within a menu, the ↵ to validate your choice or the ← key to cancel your choice and go back to the previous menu. The different options available from the main menu are:

Product selection

Paper type/format selection

Language option

Cleaning

About...

Superuser mode



Note: the superuser mode is not accessible by endusers. Only technicians from Kis - photo-Me Group are authorized to use it. This option requires a password to be accessed. If an erroneous password is entered, the user will have to wait for a timeout to go back to the main menu.

3. Realizing a photo book

Select the 'Product selection' option from the main menu. Using the ↑ and ↓ keys (and validating by hitting ↵), choose among two solutions:

1. The realization of a photo book with cover ('Photo book product' option);
2. The realization of a photo book without cover ('Photo book pro-

3.1 Realizing a photo book with cover

1. Put the photos in front of you without modifying their order or flipping them, so that you can see the first one normally (landscape view).
2. Since the 'Photo book product' option has been selected, the machine initializes. The 'First photo upside down please' instruction displays.
3. Take the first photo and flip it over from the left to the right (as you turn a page when reading a book).
4. Put the photo in the loading zone (make sure it is well placed against the limit stop).
5. Lightly push the photo downwards. A detector activates the rollers and the photo is automatically taken and processed.
6. The 'Following photo upside up please' instruction displays. Insert then the next photo at the right side. Repeat this operation as many times as there are photos.



Note: *only the first photo must be flipped over, since this one corresponds to the last photo of the album, the second one to the last photo but one, etc...The last photo is used for the cover of the book.*

Note: *Photobook PRO automatically detects that the last the last photo (the cover) has been inserted since this one is longer than the others.*

As soon as the book is finished, the 'Product available' instruction displays on the screen. Open the cover of the machine, take the photo book out of it, close the cover and hit the ↵ key to continue.

3.2 Realizing a photo book without cover

1. Put the photos in front of you without modifying their order or flipping them, so that you can see the first one normally (landscape view).
2. Since the 'Photo book product without cover' option has been selected, the machine initializes. The 'First photo upside down please' instruction displays.
3. Take the first photo and flip it over from the left to the right (as you turn a page when reading a book).
4. Put the photo in the loading zone (make sure it is well placed against the limit stop).
5. Lightly push the photo downwards. A detector activates the rollers and the photo is automatically taken and processed.
6. The 'Finish product' instruction displays on the screen once the photo has been processed. Do not take it into account until you've finished to insert the photos and insert then the next photo at the right side. Repeat this operation as many times as there are photos.



Note: *only the first photo must be flipped over, since this one corresponds to the last photo of the book, the second one to the last photo but one, etc...*

Once you have finished you have finished to insert the photos, select 'Finish product' by hitting the  key.

When the book is finished, the 'Product available' instruction displays on the screen. Open the cover of the machine, take the photo book out of it, close the cover and hit the  key to continue.

3.3 Aborting the realization

You can stop the realization of the book at any time. You can use two modes to abort the realization.

Immediate abort of the realization

Use this abort mode when you realize in time (that means before the process of the first photo has been completed) that you do not use the appropriate glue roll or if you notice a dysfunction of the machine. You can then change the glue format in the glue magazine and, once you have this, restart the realization of the book.

1. Hit the  key. The 'Immediate abort requested' instruction displays on the screen and the machine freezes (but does not switch off).
2. You can either change the glue rolls (see *Changing the glue roll's format* in the *Supplying glue* section), and then continue the book's realization by hitting the  key again, or confirm the immediate abort of the realization by hitting the  key.

3. If you confirm the immediate abort, you can then open the machine's cover and remove the inserted photo from the rollers.



Note: when the machine is switched on, it is easier to rotate the rollers after having pulled the inner plate forwards.

4. Hit the  key to go back to the 'Product selection' option.

Abort after processing of the last inserted photo

Use this abort mode when you realize too late that you do not use the appropriate glue roll. Photobook PRO will then process the last inserted photo and the machine will make available the book not completed and without cover (whatever the selected type of product) avoiding you this way to remove the last inserted photo from the rollers.

1. Hit the  key. The 'Abort at the end of the page' instruction displays on the screen and the machine completes the processing of the last photo.

2. Confirm the abort after page by hitting the  key or cancel by hitting the  key.

3. As soon as the last photo has been processed, the 'Product available' instruction displays on the screen. You can then open the machine's cover and retrieve the not finished book.

4. Selecting the paper type

In the main menu, go to the 'Paper type/format selection' option and validate your choice by hitting the  key. Select the desired paper type, then validate your choice by hitting the  key.



Note: in case you do not select a paper type, the machine will use the last used paper type or the default one at the first use of the machine.

5. Changing the user's language

In the main menu, go to the 'Language option' and validate your choice by hitting . Select 'Français' or 'English', then validate your choice by hitting  to go back to the main menu.

6. Cleaning the rollers

After a certain amount of uses, you may have to clean the rollers of the machine.

1. Go to the 'Cleaning' option in the main menu and validate your choice by hitting the  key.



2. Then use the  and  keys to rotate the rollers to a direction or the reverse direction until the cleaning position. The roller rotates an eighth revolution each time you hit one of these keys.

3. Open the machine's cover to clean the rollers.

Note: *the excess of glue that can remain on the silicone rollers (red ones) can easily and simply removed with the finger. Nevertheless, you can use a cloth and the degreasing spray (ref.: 060 677 573) if the excess of glue cannot be removed with the finger.*

7. Information about your machine

To know about the serial number (SN), the production date and the machine version, go to the 'About...' option in the main menu and validate your choice by hitting the  key. This information is then displayed on the screen.

Supplying glue

The supply of glue, in the form of rolls, is done in the magazine located at the back of the machine. A specific size of glue roll corresponds to each book size.

Photobook PRO is delivered with as many cores (recipient rolls for the used glue strip) as there are roll sizes. When a core is full, use the empty glue roll as a new one.


I. Loading the glue roll

1. Remove the glue magazine. Since this one is blocked by simple magnets, just take hold of the handle (located at the back of the machine) and pull it.

2. On the back roll arbor, place the core. Make sure that the core is well wedged against the flange (opposite picture).

3. Put the pinion flange with the fixing clip on the outside on the roll arbor (opposite picture). Make sure that the flange is well wedged against the core.


The fixing clip must be put in the appropriate positioning groove (opposite picture).

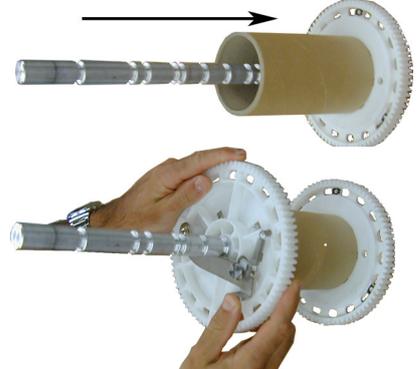

Note: each roll arbor has as many grooves as there are available album sizes.

4. Put the back roll arbor in its place of the glue magazine as shown on the opposite picture (the "naked" part of the roll arbor must be placed on the left).

Note: a locator on the right of the roll arbor allows you to correctly place the roll arbor in the magazine (it is pointed out with the arrow on the opposite picture).

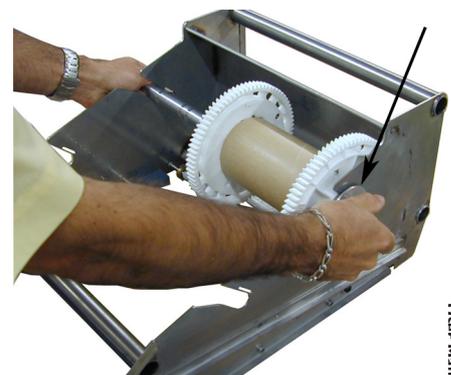


5. On the fore-roll arbor, put the glue roll in such a way that it unwinds underneath and forward (opposite picture).




6. Put the second pinion flange and place the fixing clip as you did on the back roll arbor.

7. Put the roll arbor in its place of the glue magazine as shown on the opposite picture.

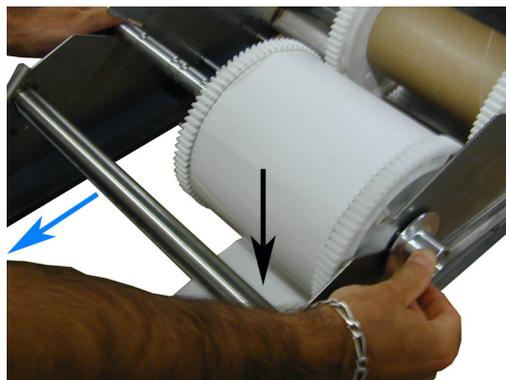


Note: the blue arrow on the picture points out the glue roll's unwind direction and the black arrow points out the positioning and the adhesive side of the glue strip.

8. Make the leader (white part of the beginning of the beginning of the glue roll) go under the roller (1 on the opposite picture), then under the grey roller (2 on the picture) and then above the red roller (3 on the picture).

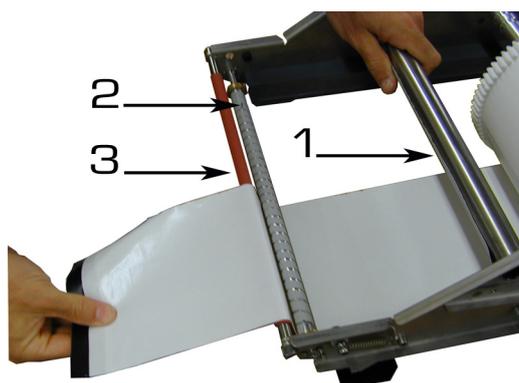



9. Put the magazine in vertical position, by putting it on its back part, in such a way that you face the magazine's bottom. Roll the leader downward and make it go under the grey roller (1 on the opposite picture) and then until the core located on the back roll arbor (2 on the picture, see also next picture).

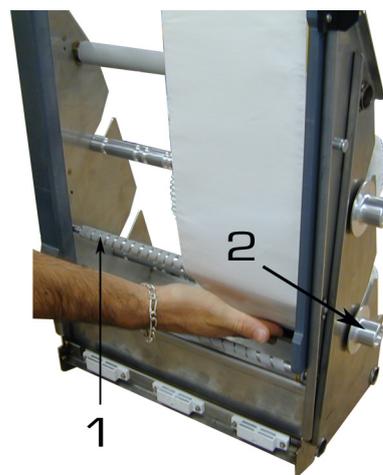

10. Turn on the magazine (always in vertical position) in such a way that you can see its upper part. Stick the beginning of the leader onto the core (red arrow on the opposite picture). For this, use the black scotch tape at the beginning of the leader.


11. Use the black flanges to make the core turn upward (in the direction of the arrow on the picture).

12. When the leader cannot be seen anymore in the fore-part of the machine (as on the picture below), the operation is completed. Put the magazine back in place at the back of the machine.

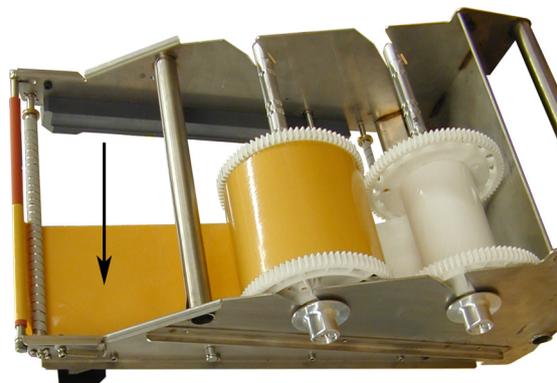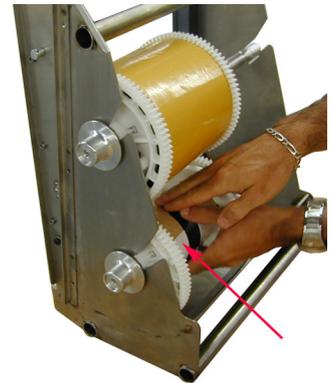

2. Path of the glue strip

In the drawing below, the path of the glue strip is colored in yellow.

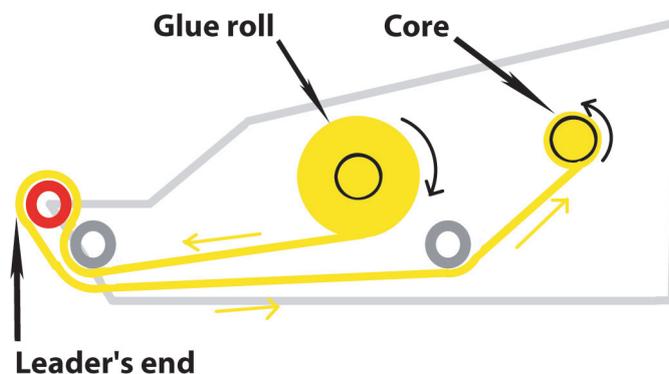


Note: make sure of the positioning of the leader's end before putting back in place the magazine.

3. Changing a finished glue roll

Follow the whole procedure (described in the *Loading the glue roll* chapter) to change the glue roll.

Reminder: keep each empty glue roll (see opposite picture), and this for each roll size, so that you can use it as a new core for next use at the same size.

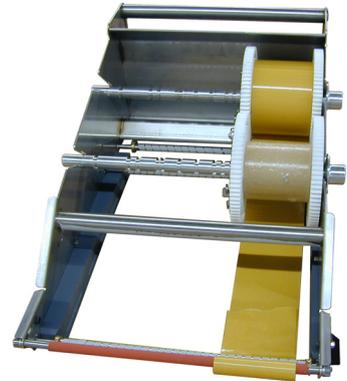


4. Changing the glue roll format

You may have to change the glue roll format before the roll in use is finished.

Note: the ideal situation is to have as many glue magazines as used formats. This way, you only need to change the glue magazine instead of following this procedure.

1. Remove the glue magazine. Since this one is blocked by simple magnets, just take hold of the handle (located at the back of the machine) and pull it.
2. Put the magazine in vertical position, by putting it on its back part, in such a way that you face the magazine's bottom.
3. Cut the glue strip on all its width thanks to a cutter lightly beneath the grey roller (as shown on the opposite drawing) so that you preserve your hands from the glue. Make sure you do not cut the strip above.
4. Rewind the glue roll and then the core.

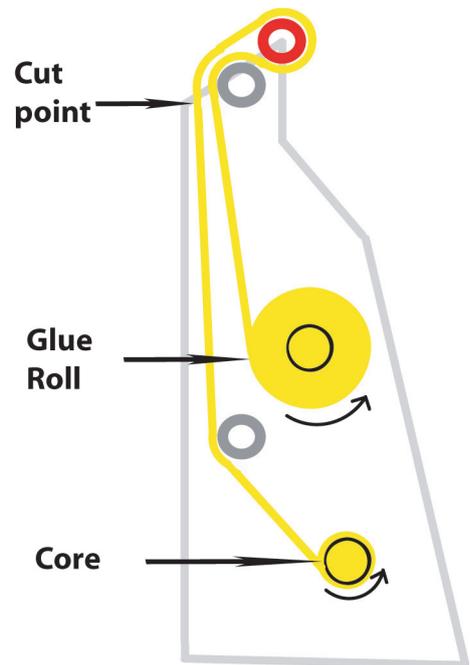


5. Load the magazine with the new glue roll format and the appropriate core. Make sure you respect the path of the glue strip.

Note: keep both rolls and mark the one which is adhesive.

6. Stick approximately 10 cm of the glue-less strip onto the adhesive side of the glue strip (as between points A and B on the opposite drawing). Do this approximately where you cut.

7. Stretch the strip by rotating the rollers in the direction shown on the drawing.

8. Put the magazine back in place at the back of the machine.

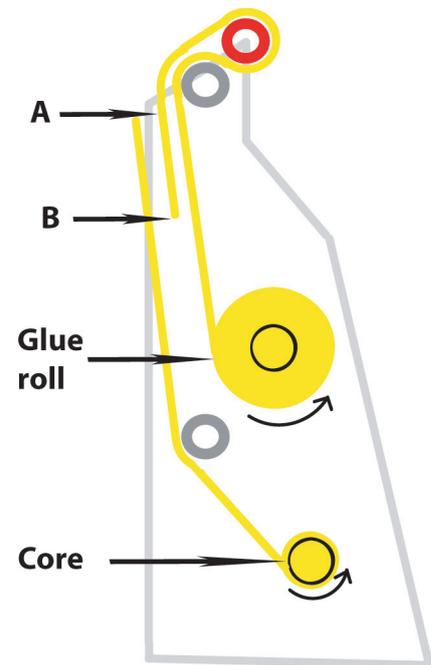

Appendix

Compliance with FCC standards part 15

I. FCC as applies to PhotoBook PRO machines

FCC Norms (USA) / normes FCC (Etas Unis)

The United States Federal Communications Commission (in 47 CFR 15.105) has specified that the following notice be brought to the attention of users of this product:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference's by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Pursuant to Part 15.21 of the FCC Rules, any changes or modifications to this equipment not expressly approved by KIS may cause, harmful interference and void the FCC authorization to operate this equipment.

2. FCC norm as applies to the bar code reader

Notice This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense. Any unauthorized changes or modifications to this equipment could void the user's authority to operate this device. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Notice This Class A digital apparatus complies with Canadian ICES-003.



This document is not binding. The manufacturer reserves the right to modify his machines and this manual without prior notice.

Document non contractuel. Le constructeur se réserve le droit de modifier ses machines et le présent document sans préavis.

User Manual Photobook PRO
Manuel Utilisateur Photobook PRO

Ref. 060 677 289 A

© Kis 10.2006